

How to change centigrade degree to Fahrenheit degree.

1, Open your channel picture and click right to find the coaxial control such following picture .




2, Left -Click coaxial control ,and then it will show following picture,and left-click the button of the center of a circle..



3, and then the menu would be showed on the screen ,pls find the “SYSTEM”,



4, and then Left-click the left button on the circle 5 times very quickly..and then Left-click right button on the circle 5 times ,and then Left-click the button of the circle. Pls check below picture. **(Note: You must click very quickly.)**

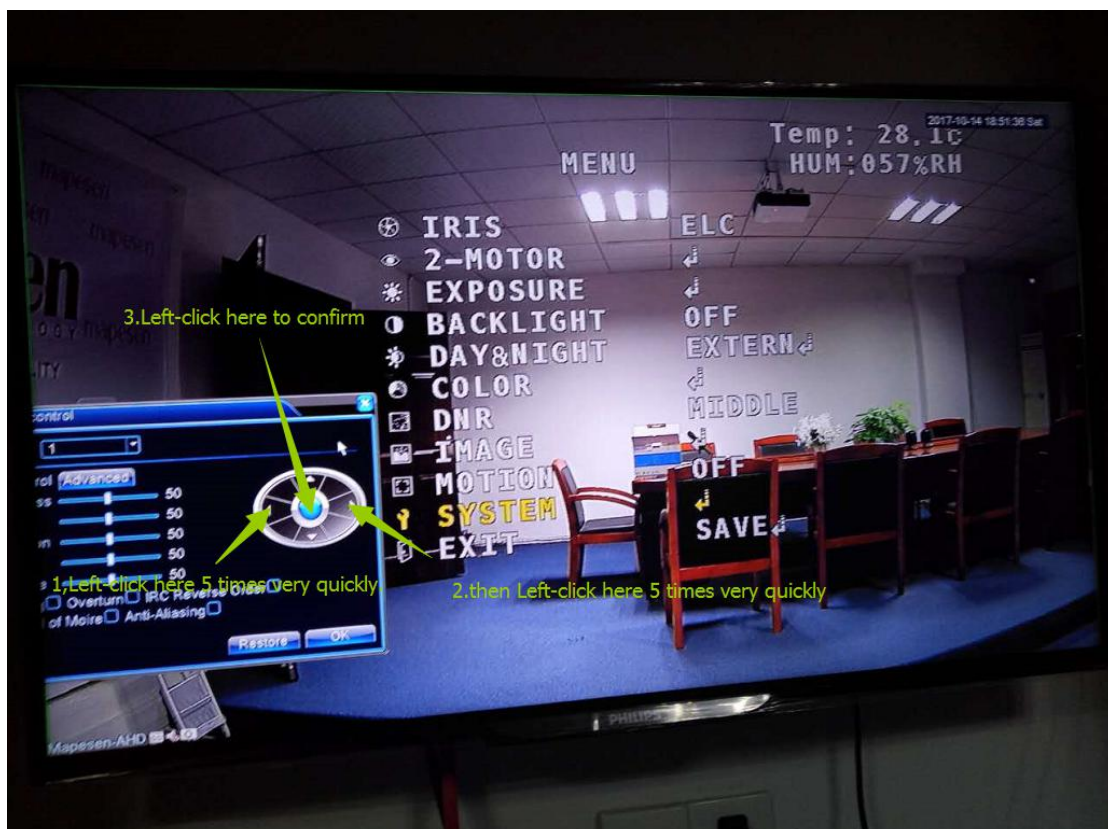

5, After you click the button of the circle ,it would show following picture.




6, And then pls find the "TEMP DIS"



7, And then Left-click the right button or left button, Change the "DegC" to "DegF", then you could see the temperature changed to Fahrenheit degree already.



8, And then choose "RETURN", Left-click the button of the circle, and then choose the EXIT SAVE ..

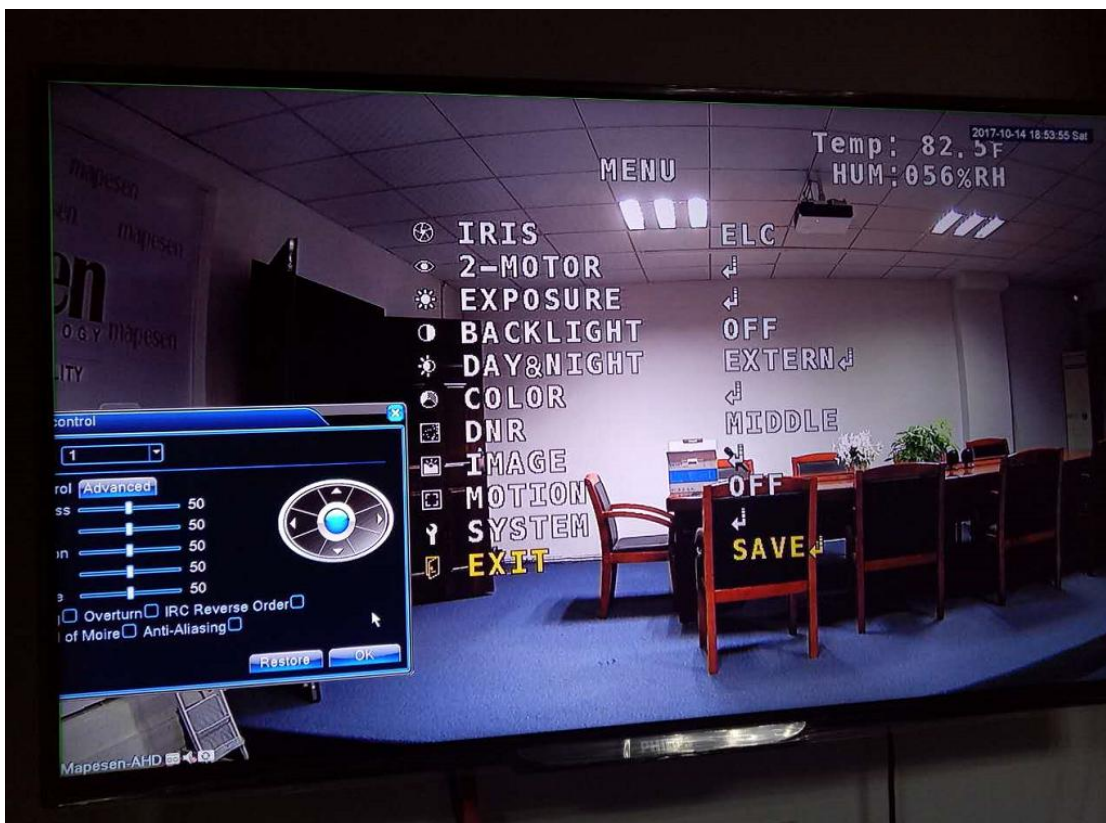

9, It has been changed to Fahrenheit degree like following picture.

