


ST-7 Keypad instruction

LED:

- 🔌 Power LED: it will normal ON when AC and battery without any trouble. It will off when both AC and battery with trouble. It will slow flash when battery with trouble, it will quick flash when AC with trouble.
- 🔔 Alarm LED: It will quick flash when alarm.
- 🔒 Arm LED: It will ON when armed, slow flash when stay in, quick flash when alarm.
- 🔓 Disarm LED: It will ON when disarmed, it will OFF when zone trouble.



Front View

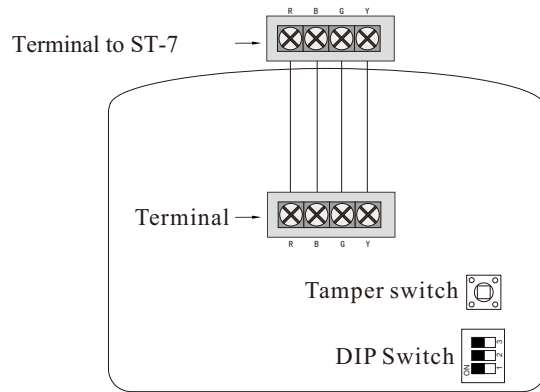

Back View

DIP SWITCH SETTING ON KEYPAD:

On keypad there are 3 dip switch, can set 8 keypad address code.

Black stands for the position of dip switch, see picture:

Keypad # DIP switch setting

1	
2	
3	
4	
5	
6	
7	
8	

Note: when use more than one keypad. Each keypad connect to alarm panel in parallel. the dip address of keypad can not repeat. The panel only check keypad during power connecting. Repower panel is required if want to add keypad.