


# Wireless GSM Terminal

## ( work with PSTN alarm system )

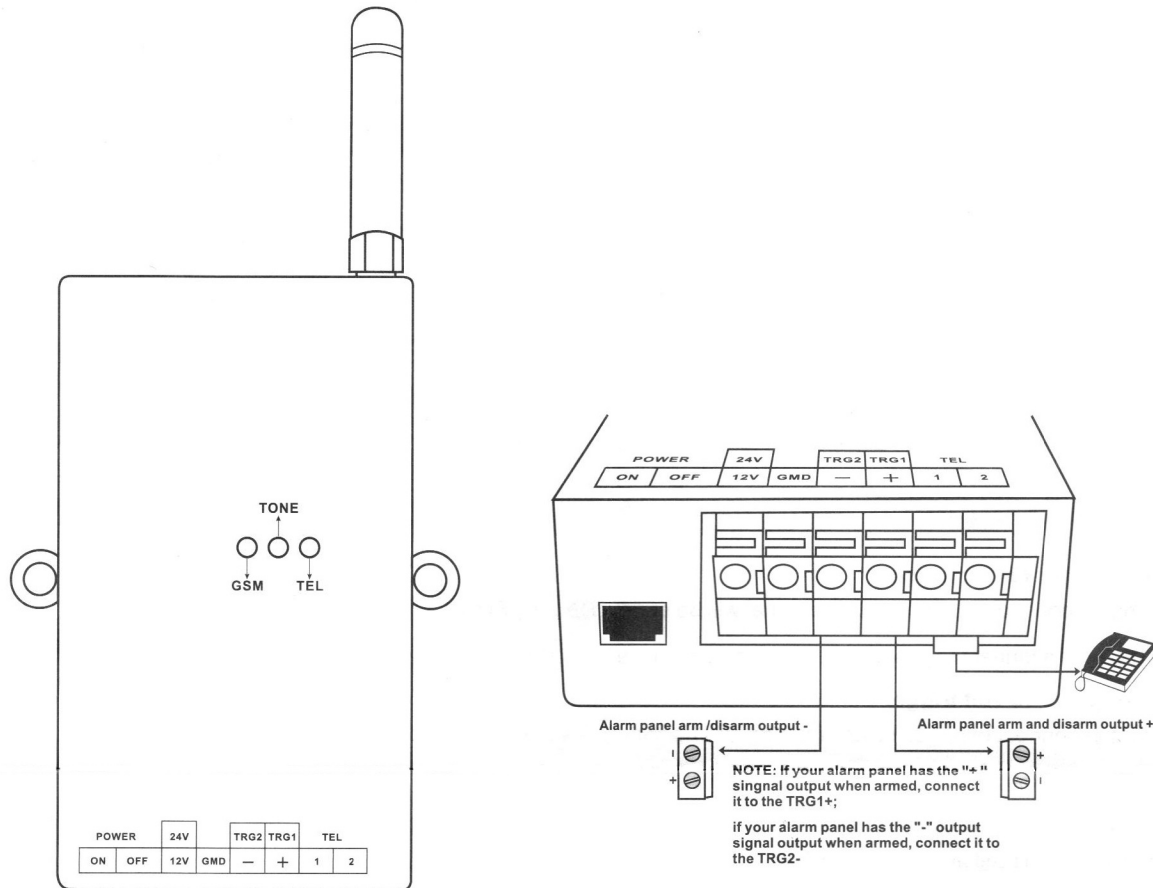

### Feature

- 1, Quad band 850/900/1800/1900MHz
- 2, Support PSTN function
- 3, two trigger input 12V +, -
- 4, Text message notification
- 5, Text content changeable
- 6, Simple to install and easy to maintain
- 7, Steady QUECTEL MD2510 GSM module & reliable design ensures good performance
- 8, Attractive Plastic casing
- 9, SIM card support(3V,5V)
- 10, Suitable for all kinds of weather & environment

### SMS Operation

#### 1) Change password

Default password is 1234. user can send sms order **1234CP8888** (8888 is new password) to the device, then you will get a reply message **CP8888**, it means password has been successfully change.

#### 2) Forgot password

Press and hold on the re-set key, then connect to power, the 3 LED indicators will flash 3 times go off, that's means the the default password have been re-set.

### 3) Store User Number .

sent SMS order **1234?** to the terminal then you will get a reply sms

TEL1: \_\_\_\_\_  
TEL2: \_\_\_\_\_  
TEL3: \_\_\_\_\_  
TEL4: \_\_\_\_\_  
TEL5: \_\_\_\_\_

Copy and paste this reply message by adding number, then send back to the terminal, you will get a reply SMS **SAVE OK**  
it means store user number successfully

TEL1: 13800138000 \_\_\_\_\_  
TEL2: 13801138001 \_\_\_\_\_  
TEL3: 13802138002 \_\_\_\_\_  
TEL4: \_\_\_\_\_  
TEL5: \_\_\_\_\_

## Model Of the trigger

### 1) TRIG1 +: positive 12 volt trigger

Whenever Trig1 + connect to positive 12V terminal will be send **ON** by SMS

Whenever Trig1 + disconnect to positive 12V terminal will be send **OFF** by SMS

### 2) TRIG2:- Negative 12 volt trigger

Whenever Trig 2- connect to negative 12V terminal will be send **ON** by SMS

Whenever Trig 2- disconnect to negative 12V terminal will be send **OFF** by SMS

You can use this input for power cut notification

For using this trigger you need intermediate circuit

## Change Text Message of Two Trigger

Terminal has specified SMS for each 2 trigger

### 1) Trigger 1 +

For example . Trigger 1+ will send sms **ON** ,.user can change the content of the sms by sending sms to terminal  
( less than 40 characters)

**1234SMS10: new content**

For example:send SMS **1234SMS10: STOP** SMS reply: **SMS10: STOP**

sms **1234SMS11: ALARM** SMS reply: **SMS11: ALARM**

### 2). Trigger 2 -

For example . Trigger 2 - will send SMS **ON** ,when it triggered .user can change the content of the sms by sending sms to terminal  
( less than 40 characters)

**1234SMS20: new content**

Forexample:send SMS **1234SMS20: DISARM** SMS reply: **SMS20: DISARM**

Send SMS **1234SMS21: ARM** SMS reply: **SMS21: ARM**

### Reset Terminal

user can reset the terminal by sending SMS" **1234FD** " to it,only preset phone numbers are available for it

### Forget Password

user can check the password by sending SMS " **CHK** " to terminal ,it will reply a SMS about the password,only preset phone numbers are available for it