


# Expansion Module Description

## Wiring instructions

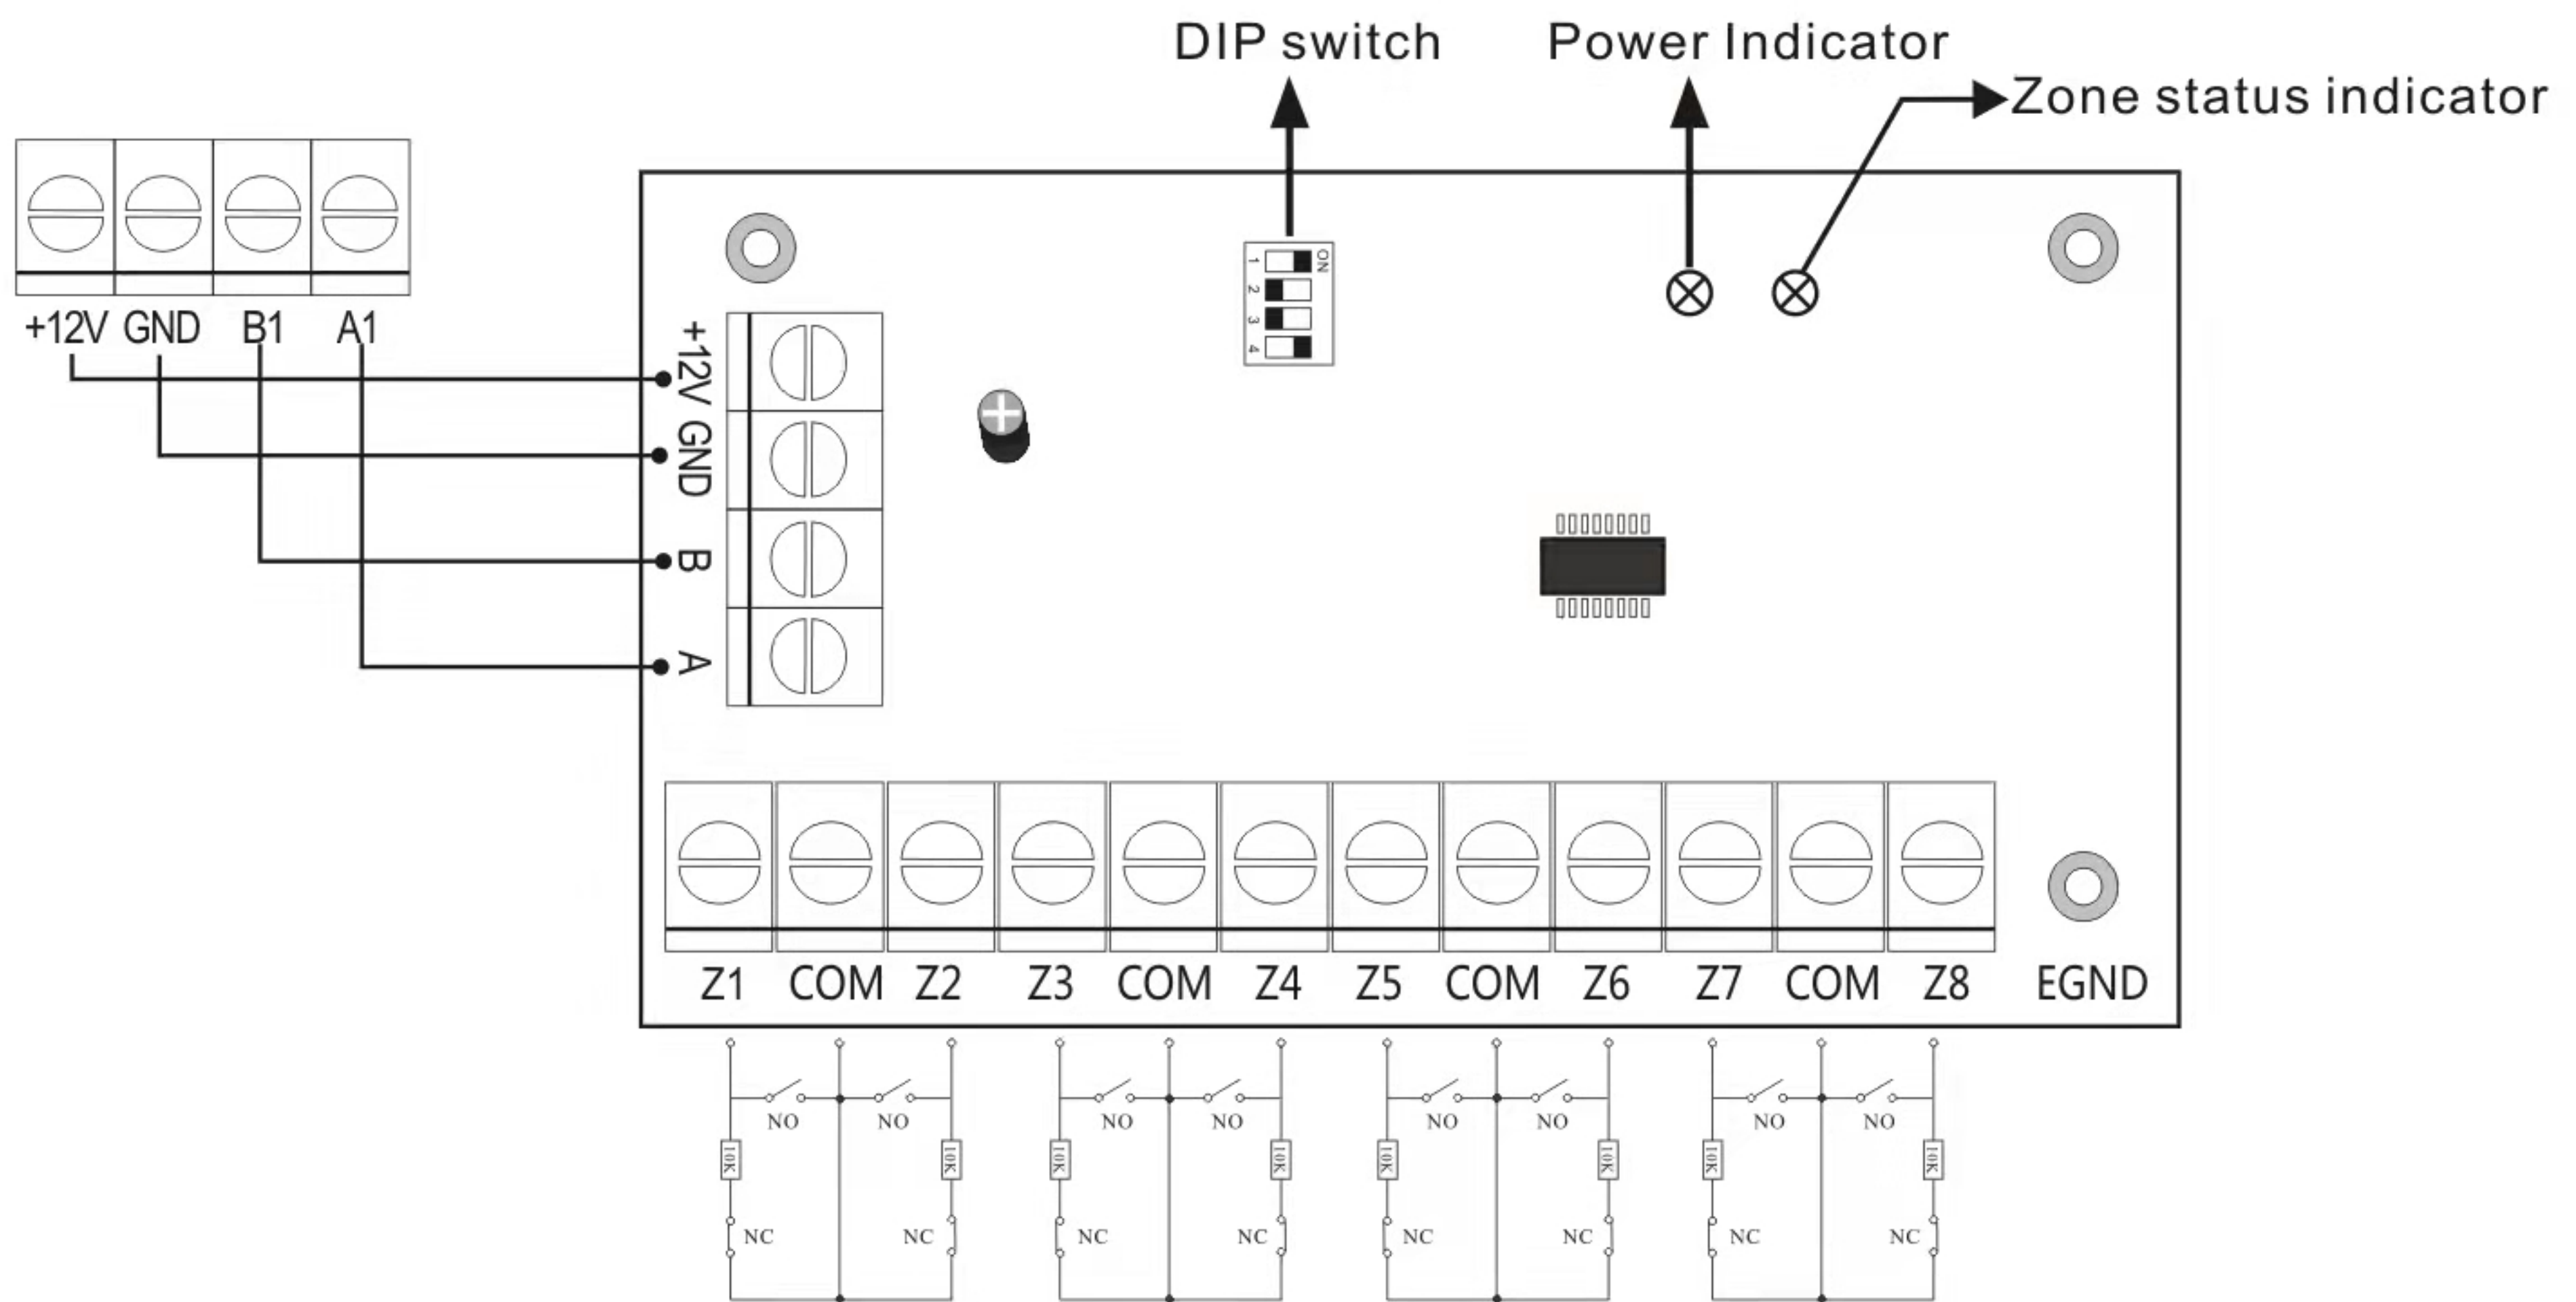








## Light

Power indicator: always on when power is on;

Zone status indicator: Zone is enabled and flashes slowly when normal  
When the zone is faulty, it always lights up.

## Dialing code description

Please dial the code according to the table below.

Keypad#	DIP SW#	Zone#	Keypad#	DIP SW#	Zone#
1	1111 	41~48	5	1101 	73~80
2	0111 	49~56	6	0101 	81~88
3	1011 	57~64	7	1001 	89~96
4	0011 	65~72			