

SOMMARIO

Precauzioni	pag. 2
Avvertenze	pag. 2
Operazioni	pag. 3
Struttura Prodotto	pag. 3
Struttura Telecomando	pag. 3
Operazioni Utilizzo	pag. 4
Memoria Dati	pag. 4
Contenuto Confezione	pag. 5
Caratteristiche Tecniche	pag. 5
Dichiarazione di Conformità	pag. 6

Precauzioni:

1. Non smontare l'apparecchio: non rimuovere la copertura o le viti, così da evitare sbalzi elettrici. All'interno non ci sono parti riutilizzabili. In caso di necessità, rivolgersi a personale qualificato.

2. Conservarlo e maneggiarlo con cura: l'apparecchio può danneggiarsi se utilizzato o conservato in modo improprio.

3. Non esporre l'apparecchio a pioggia o altri liquidi. Non utilizzarlo in luoghi umidi: se l'apparecchio viene a contatto con liquidi asciugare immediatamente. Spegnerlo e rivolgersi a personale qualificato. I liquidi possono danneggiare l'apparecchio e creare corto-circuito.

4. Non utilizzare detergenti forti o abrasivi per pulire l'apparecchio: utilizzare un panno asciutto per pulire l'apparecchio quando necessario. Nel caso in cui lo sporco sia difficile da rimuovere, utilizzare un detergente leggero e strofinare delicatamente.

5. Non puntare mai l'apparecchio verso il sole: non puntare mai l'obiettivo verso la luce diretta del sole, nè se si è in luogo chiuso, nè quando si è all'aperto. Fare attenzione quando lo si utilizza in prossimità di luce, sia artificiale che naturale, o di luce che riflessa.

6. Non utilizzare l'apparecchio in presenza di alte temperature, umidità o fonti di energia: utilizzare l'apparecchio con una temperatura compresa tra i -10°C ed i +50°C, ed umidità inferiore ad 85%. Per una corretta alimentazione, fare riferimento al manuale d'uso.

Foto e caratteristiche del prodotto si riferiscono al momento in cui è stato stampato il manuale, differenze di minore entità sono possibili in corso di produzione. Eventuali differenze non influiscono sulla sicurezza o sulle prestazioni del prodotto.

Avvertenze e Note



ATTENZIONE:

Per evitare fiamme o shock di varia natura, non esporre l'apparecchio alla pioggia o a liquidi di alcun tipo.

1、 Structure




2、 Introduction

- ◇ Date and Time Display
- ◇ Alarm Function and Snooze Function, the interval(1-60minutes)
- ◇ Voice Broadcast the present time.
- ◇ Temperature Display
- ◇ Natural Sound Broadcast (Interval 10-60minutes)

3、 Time:


- ◇ In the status of time display, press and click the button, SET to reset Year. There is "2010" flashing on LCD, press the button, UP or DOWN to choose the Year.
- ◇ Press the button, SET to reset Month-Day-Hour-Minute one by one

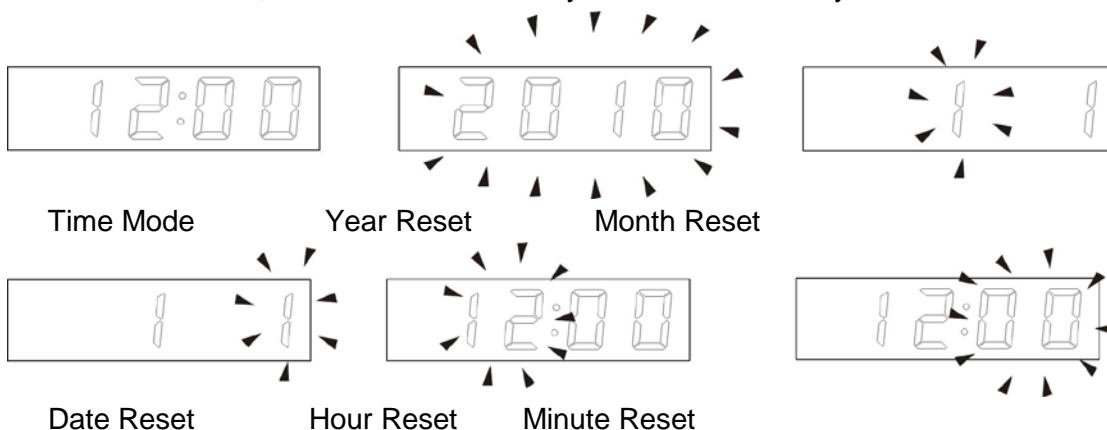


- ◇ When the resetting finishes, press and release the button, "MODE" to get out.

4. Alarm Reset


- ◇ In the status of Time,press and release the button,MODE to Alarm Reset Mode
- ◇ Press and release the button,SET one time to reset the Hour
Press and release the button,SET two times to reset the minute
Press and release the button,SET three times to Reset the Snooze Mode(Time Interval,1-60minutes)
- Press and release the button,SET four times to reset Alarm Ring,press the button,UP or the button,DOWN to choose.

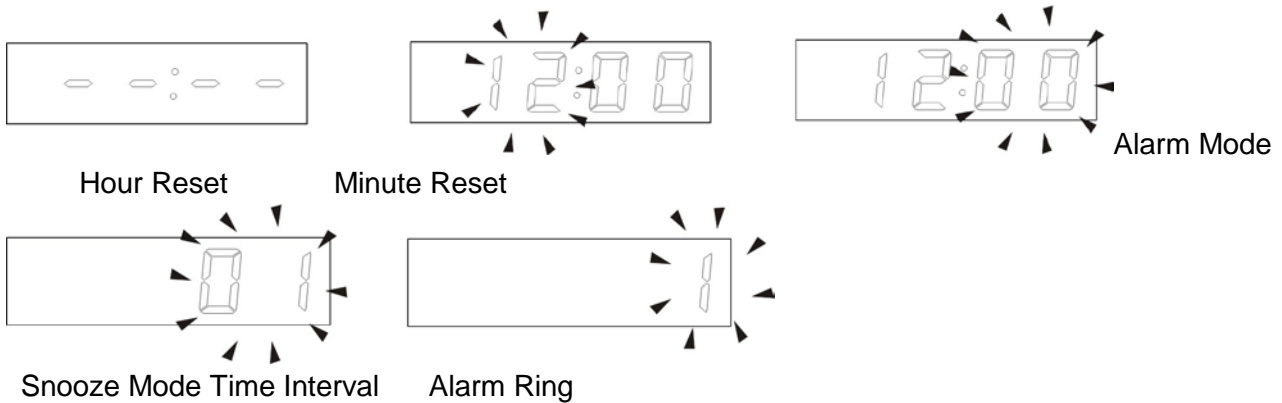

- ◇ Press and release the button,“MODE” to get out, the present time display on LCD.
- ◇ In the status of Alarm,press and release the button,UP to turn on or turn off Alarm.When the Snooze Function on,the “🔔” will flash.

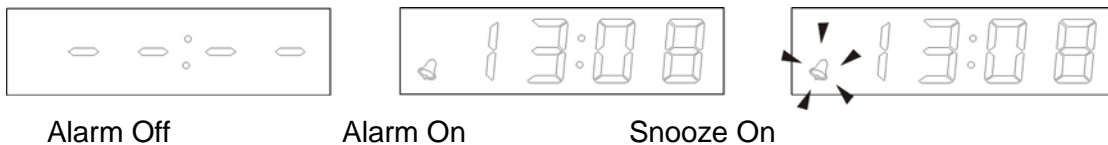


- ◇ Press and release the button,“MODE” to get back to the time reset mode.
- ◇ In the time mode,press the button,“UP” to choose the time mode(12 or 24),press the button,DOWN to choose °C or °F

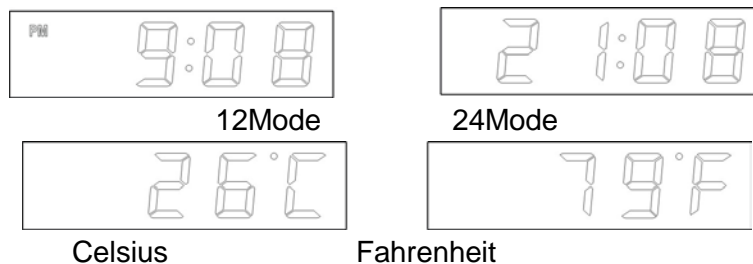

5. Timekeeping,Natural Sound

- ◇ In the time mode,press and release the button,TALK to talk the present time.
- ◇ In any mode status,press and release the button,TIME to reset the Natural Sound(10-60minutes)

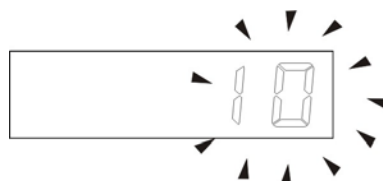


Natural Sound Time Reset

- ◇ In any mode,press the button,TALK for three seconds to Natural Sound Listening Mode,the interval time will countdown.



Natural Sound Mode



Natural Sound Stop

- ◇ In the mode of Natural Sound Mode, press and release the button, TALK to pause, press and release again to choose the next Natural Sound. Press and release the button, MODE to get out.


DVR Function Introduction



This product is a multifunctional clock provides the DV functions including video, audio, motion detection, webcam, movable disc. It supports TF Card and remote control function. The max. memory can be up to 32GB, the high capacity battery provide the enough power for long time recording. Just because of this many functions and features, it can be used as home security monitor.


1、Operation

(1) Turn On

Open the right side lid of camera, insert the TF card, push the button to ON.


- (2) Press the button,  on remote control until the blue indicator is burning. It enters into the Standby Status.


- (3) Press the button,  to enter into the Video Status. The Blue Indicator is off after it flashes three times. Press the button,  again to stop video. The Blue Indicator is burning.

- (4) Press the button,  to record audio, the blue indicator will be off after it flashes three times. Press the button again to stop the recording. The blue indicator is burning.

- (5) Press the button,  to shoot a image, the blue indicator will flash one time.


- (6) Press the button, to start this function, press and release the button again to stop it. The blue indicator will be burning.

- (7) Press the button,  to turn off the camera, the blue indicator will be off.

- (8) Push the button to ON, connect the camera and PC, then, press and release the button,  on remote control.

(9) Webcam

Install the software in CD, Push the button to ON

Press the button,  to turn on the camera, Connect Camera and PC with original cable

(10) Charge

Push the button to off, Connect the camera and power source

The red indicator is burning, During charging, the red indicator is burning, When it is full, the red indicator is off

Notice, PC also can provide the power to it.

(11) Reset

Because of the wrong operation or any other unknown reasons, there is no any feedback from the camera, please push the button to OFF and push it to ON again.

(12) Low Power

When it is low power, the blue indicator will flash quickly.

(13) UPDate

- ◇ When the programe lost,please install the drive proramme in CD
- ◇ Click the STK02NU
- ◇ Press update
- ◇ Choose 0x35 behind of ①DRAM Timing
- ◇ Choose 8M behind of ②DRAM Size
- ◇ Press and release the button,OK

(14) File Storage and replay

Push the button to ON

Connect the camera and PC with USB Cable

Press and release the button, 

The blue indicator is burning

Copy the file to PC

Replay the file in software, Media player/KM player

2. Specifications

Pixels	5. 0 Mega CMOS
Video Resolution	1280*720
Video Form	H.264
FPS	30fps
View Angle	140°
Motion Detection Distance	Direct 6 meters
Low Illumination	1LUX
Battery Capacity	2400MA
Recording Time	More than 24 hours
Remote Control Distance	18m
Recording Audio Area	40m²
Power Consumption	150MA/3.7V
Store Temperture	-20-80°C
Operation Temperture	-10-60°C
Operation Humidity	15-85%RH
Memory	TF Card
Max.	32GB
Software	Media player/KMplayer
Data Transfer Interface	USB1.1/2.0
Operation System	2000/XP/Visat32
Memory Consumption	1GB/40min
Charge Time	About 4 hours

Notice

Place of using:It can not be used in the ileagle place,before use it,please pay attention to the law.

Software Update:The factory will improve the software in order to improve the service and using feels of this products.Please try to contact your seller to get the neweast software.

Working Temperture:Please use it in the suitable temperture which the man can bear.

Working Humidity:Please do not use it in humidity place.

LUX:Please use it in the place with enough light, please do not make the lens straight to strong light source.

Clearance:Please do not use it in the dirty place, please clear it with soft cloth and clear it smoothly.Please do not use it in strong magnetic field or strong electric field.

Dichiarazione di conformità

Noi importatori

Skynet Italia srl Via del Crociale 6 Fiorano Modenese (MO) P.iva IT01260860117



dichiariamo che il prodotto: TELECAMERA DVR A COLORI Modello Digi Spy V3 rispetta i requisiti essenziali della Direttiva EMC 2004/108 CEE, 2011/65/UE RoHS

EN 55022 2006 +A1:2007
EN 55024 1996 +A1:2001 +A2:2003
IEC 61000-4-2:2008
IEC 61000-4-3:2008

INFORMAZIONI AGLI UTENTI

ai sensi dell'art. 13 del Decreto Legislativo 25 luglio 2005, n. 151 "Attuazione delle Direttive 2002/95/CE, 2002/96/CE e 2003/108/CE, e successive modifiche relative alla riduzione dell'uso di sostanze pericolose nelle apparecchiature elettriche ed elettroniche, nonché allo smaltimento dei rifiuti"

Il simbolo del cassonetto barrato riportato sull'apparecchiatura indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti.

L'utente dovrà, pertanto, conferire l'apparecchiatura integra dei componenti essenziali giunta a fine vita agli idonei centri di raccolta di differenziata dei rifiuti elettronici ed elettrotecnici, oppure riconsegnarla al rivenditore al momento dell'acquisto di nuova apparecchiatura di tipo equivalente, in ragione di uno a uno. L'adeguata raccolta differenziata per l'avvio successivo dell'apparecchiatura dimessa al riciclaggio, al trattamento e allo smaltimento ambientale compatibile contribuisce ad evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il riciclo dei materiali di cui è composta l'apparecchiatura. Lo smaltimento abusivo del prodotto da parte dell'utente comporta l'applicazione delle sanzioni amministrative di cui al D.Lgs n. 22/1997" (articolo 50 e seguenti del D.Lgs n. 22/1997).